

## **2004-2005 Honda TRX 450R**

### **Air filter installation & maintenance**

- ❑ Remove all of the stock air filter and its components.
- ❑ Thoroughly clean the air box and air boot. Dirt is your motors number 1 enemy.
- ❑ Place the Sparks Air Supercharger ring inside the stock intake tube.
- ❑ Oil your clean air filter with a good pour on type oil, we recommend Twin Air filter oil.
- ❑ Pour a liberal amount of oil all over foam and massage the oil into filter and squeeze out any extra oil.
- ❑ Slide the filter over the air supercharger ring until it butts up against the front of the air box.
- ❑ Tighten the clamp and you are ready to go.
- ❑ It is important to clean and oil the filter whenever it gets dirty.
- ❑ To clean it, we recommend using filter cleaner like Twin Air. Other options would be kerosene or mineral spirits and then a good degreaser like Simple Green, 409, or even a good dishwashing soap.
- ❑ **DO NOT** use gasoline to clean your filter. It can significantly shorten the life of the foam and loosen the glue.
- ❑ The goal is to get all of the old oil and dirt out of the filter. Rinse well and dry before re-applying the oil.
- ❑ Reinstall the air filter as per installation instructions.